



## **Simplified Programming Instructions** **for T612-C / T634-C**

### **Clock Setting –**

Press 'CLOCK'

Press 'DAY' to select correct day

Press 'Hour+' or 'Hour –' to select correct hour of the day

Press 'Min+' or 'Min-' to select correct minutes.

### **Important Notes –**

- 3 x ON / OFF's can be set for each channel. One of the following options can be chosen for each on/off -
  - a. Mon to Sun
  - b. Mon to Fri
  - c. Sat and Sun
  - d. Any day in the week
- The start and end time must be both set. Otherwise the timer will ignore the settings that have been entered.
- Must ensure the same day is also set for ON and OFF time.

### **Programming – (Applies to each channel)**

Hold down 'PROGRAM' and then press the desired channel button

**SET THE START TIME:**

1. Press 'Day' to select the correct day or day block required.
2. Press 'Hour+' or 'Hour-' to select correct hour of the day.
3. Press 'Min+' or 'Min-' to select correct minutes
4. Press 'Program'.

**SET THE OFF TIME:**

1. Press 'Day' to select correct day or block required (must be the same as selected from start time above).
2. Press 'Hour+' or 'Hour-' to select correct hour of the day.
3. Press 'Min+' or 'Min-' to select correct minutes.
4. Press 'Clock' to finish.

**Channel Status Setting**

Each Channels status can be set to one of the following settings by pressing the appropriate Channel button -

- **ON** (permanently ON)
- **OFF** (permanently OFF)
- **AUTO** (will follow programmed times)

### **Reviewing Programs - (applies to each Channel)**

Hold down 'Clock' and then press a Channel button - the START and END times will be displayed for 2 to 3 seconds one by one automatically. After completion, the display will return back to normal LCD display.

### **Advance Function - (applies to each Channel)**

\*Used when Channel is in 'auto mode'.

Hold down 'Advance' and then press a Channel button. This will turn on the Channel. Icon 'A' will appear on the LCD screen.

The Channel will turn off at the next programmed 'OFF'. Icon 'A' will disappear from the LCD screen.

To deactivate hold down 'Advance' then press Channel button.

### **Boost Function - (applies to each Channel)**

\*Used when Channel is in 'auto mode'.

Hold down 'Boost' and then press a Channel button. This will turn on the Channel for 1 hour. Icon 'B' will appear on the LCD screen.

The Channel will turn off after 1 hour. Icon 'B' will disappear from the LCD screen.

To deactivate hold down 'Boost' then press Channel button.

### **Summer Time Setting**

To change the time so that it will be one hour ahead.

1. Hold down 'DAY' and press 'Min+'.
2. To cancel hold down 'DAY' and press 'Min+'.

### **Normal LCD Display**

Suppose all the channels are activated and all the channel LED's are on, CH1 is the default display even if the timer is in manual or auto mode.

### **Reset Function**

Press RESET to erase all time settings. All the segments on LCD will turn on then the LCD screen will go back to the normal LCD display. All the channels will work in AUTO mode. The AUTO icon of each channel will turn on. Monday is selected.

### **Automatic Return Function**

The LCD screen display will return to normal 60 secs after the last button was pressed.

### **Backlight Function**

The backlight is set to stay on for 10 seconds after a button is pressed.

### **Memory Kept by Backup Battery**

When the power to the timer is lost (i.e. there is a power cut), the built-in battery back up will ensure the timer stays on. The battery back up can last up to 7 days.

### **IMPORTANT**

*This unit should be installed to current IEE wiring regulations if in doubt consult a qualified electrician.*